



1



2



3




4



5



6

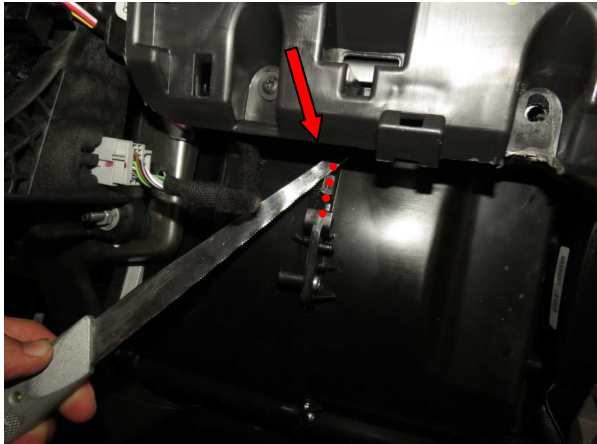


7




8



9

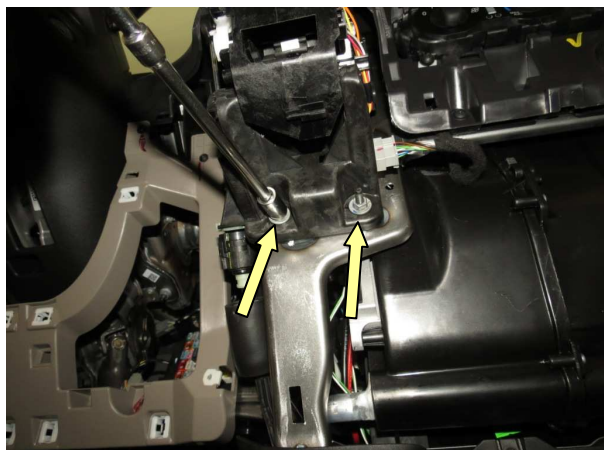


10

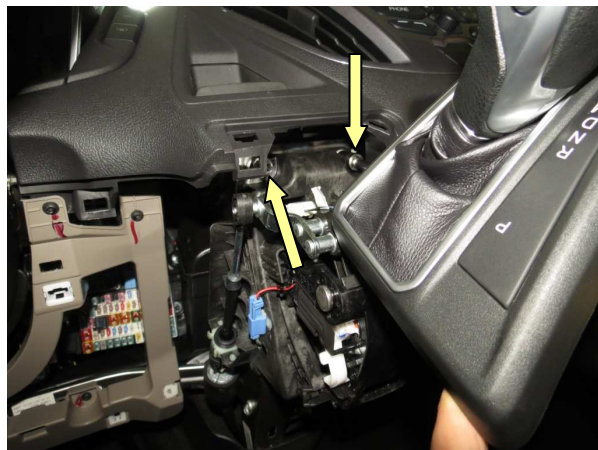

11




12

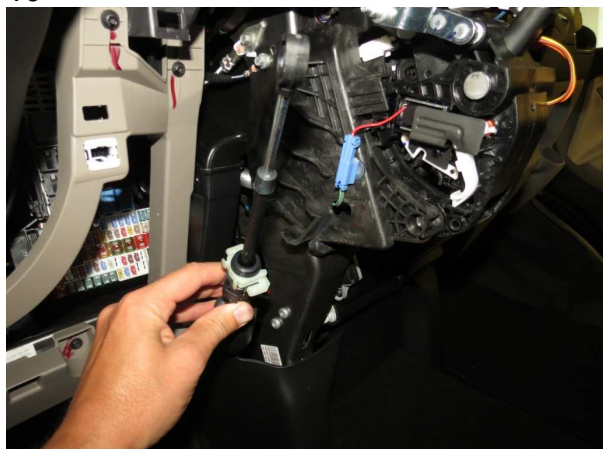

13




14

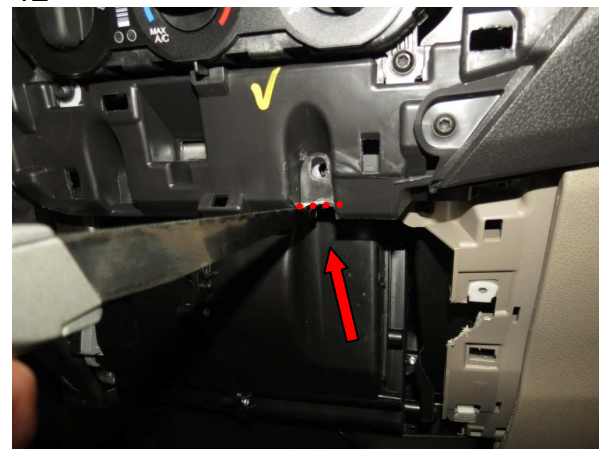


15



16

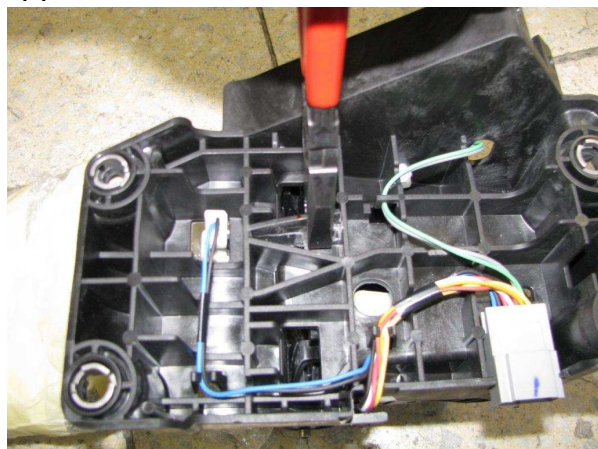

17/A

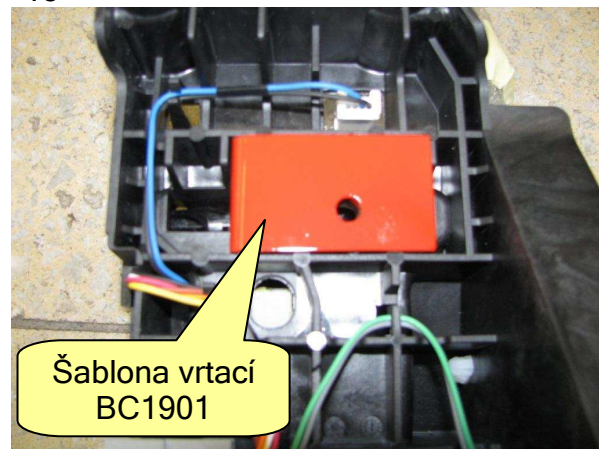


17/B

PCF 1901 ob




17/C

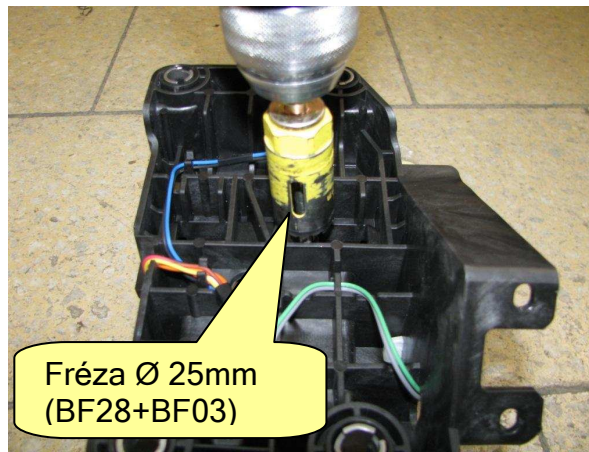


Fréza Ø 25mm
(BF28+BF03)


17/D

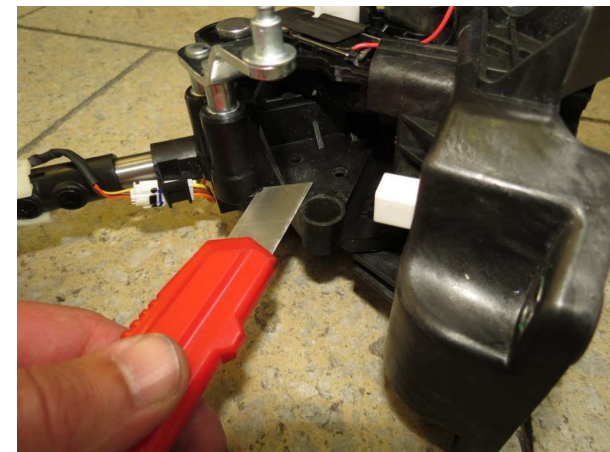


17/E

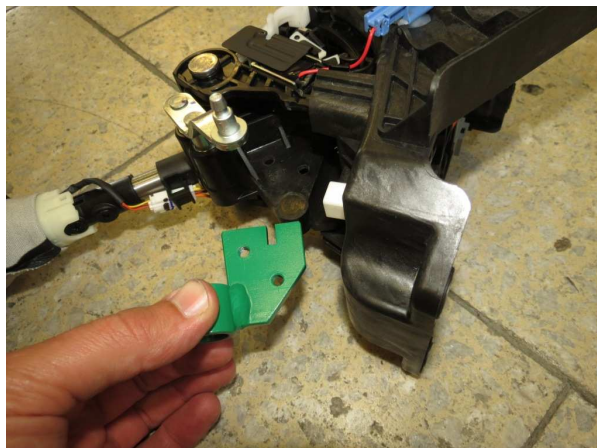

18

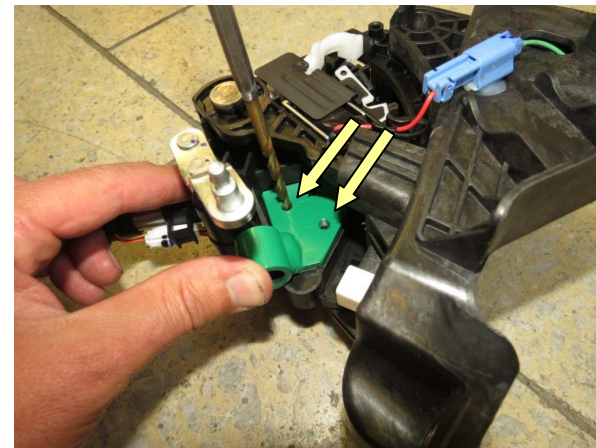


19

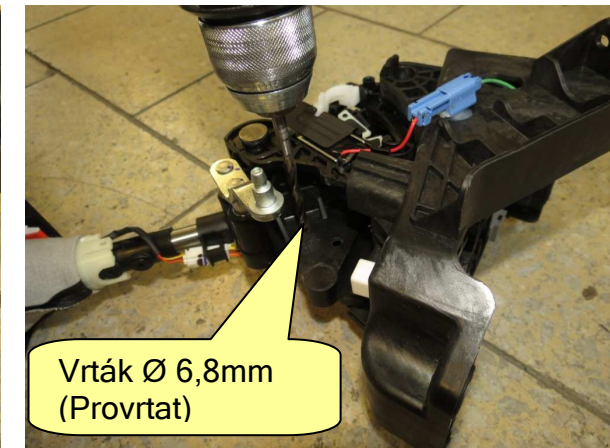

Vrták Ø 6,8mm
(Provrtat)


20

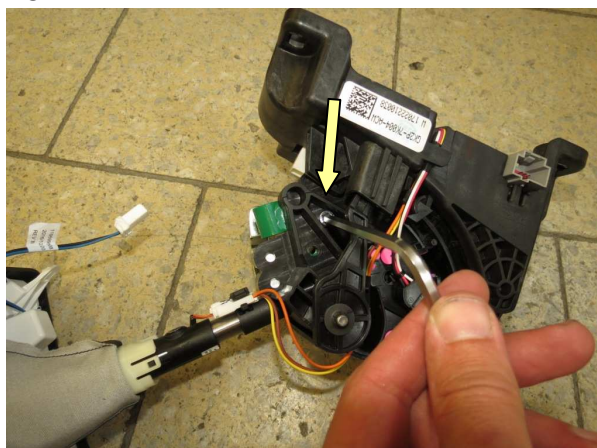


21



22

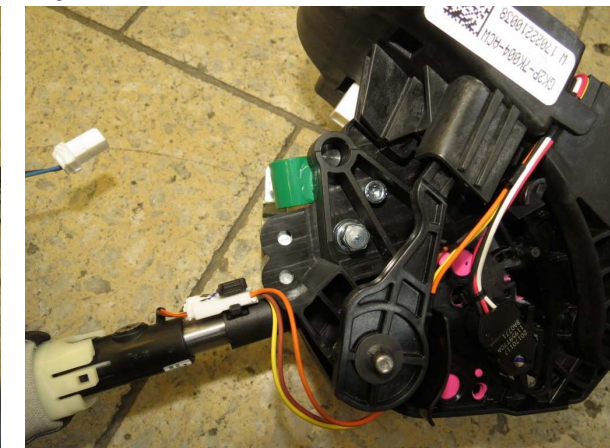


23

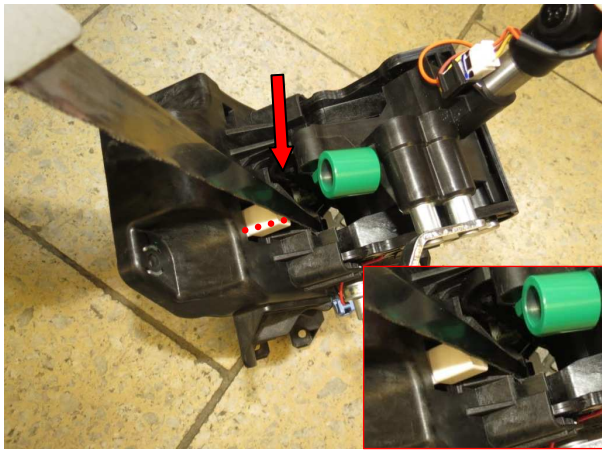

24



25

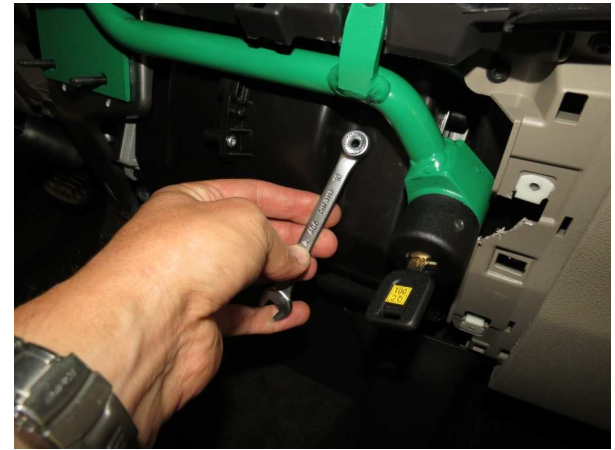


26




27




28

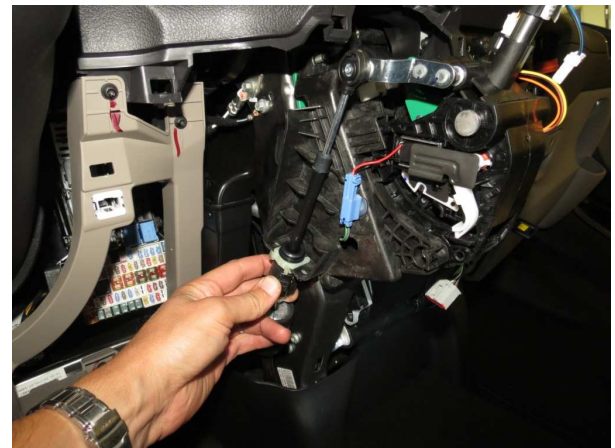


29

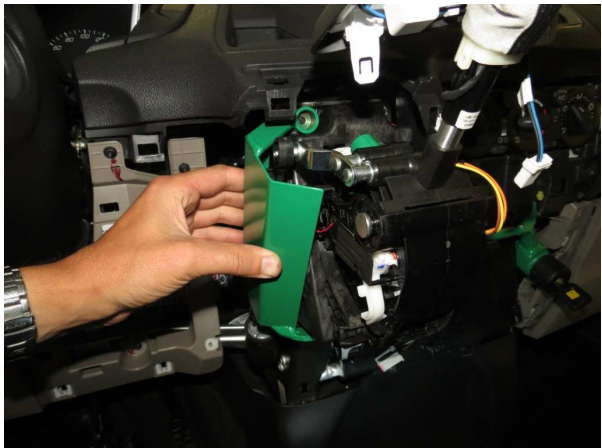


30

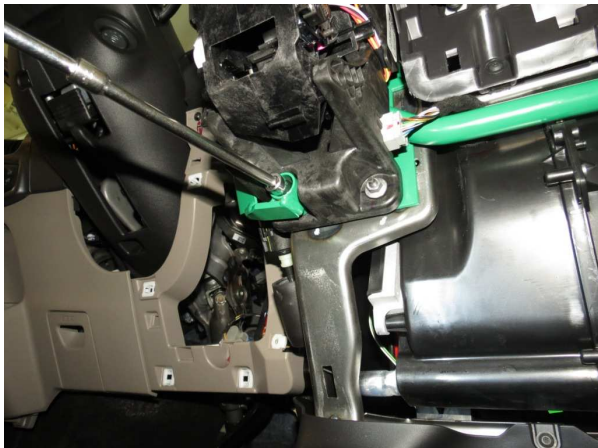

31

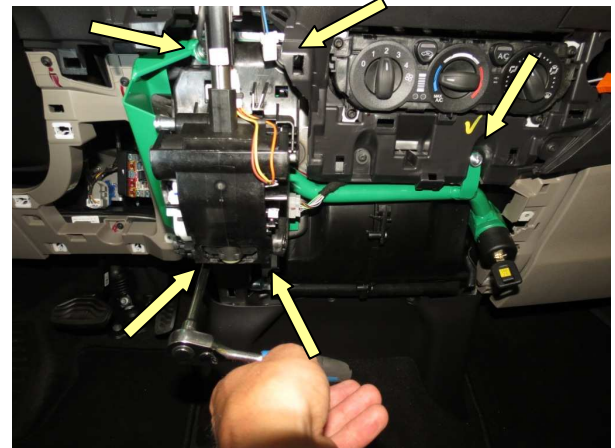

32

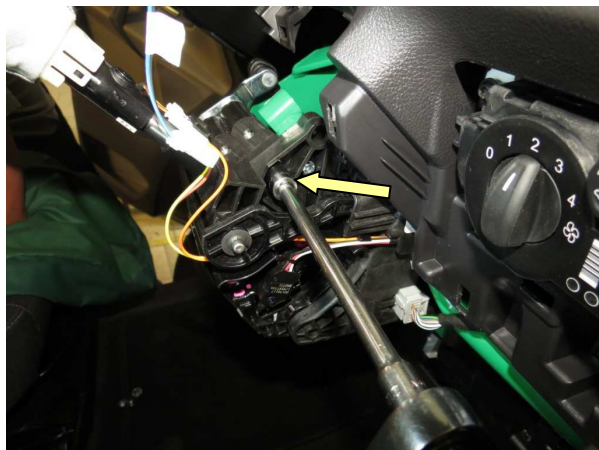


33



34



35

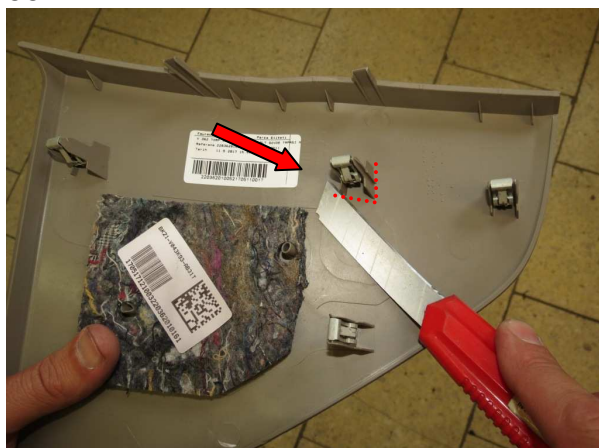

36



37



38




39



40



41

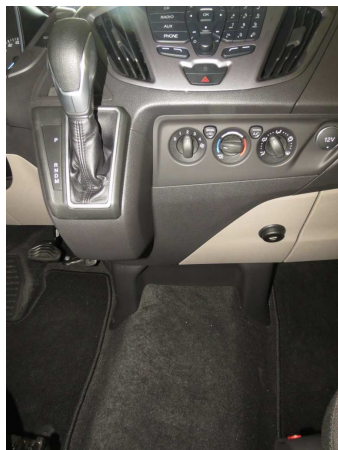

42



43

